

INSTRUCTION MANUAL

adore AP









Illustrations and designs may vary.

IMPORTANT: KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT.















REARWARD-FACING USING SEATBELT


NEWBORN UP TO 30 MONTHS, APPROX.





Front of vehicle



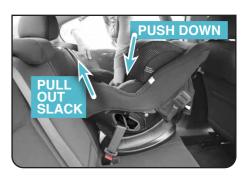

ATTACH TOP TETHER






FORWARD-FACING USING SEATBELT

12 MONTHS UP TO 4 YEARS, APPROX.



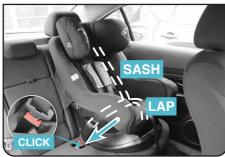





ATTACH TOP TETHER





REARWARD-FACING USING ISOGO


NEWBORN UP TO 30 MONTHS, APPROX.










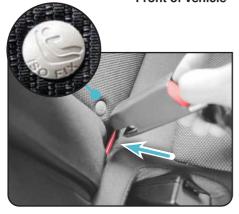




Press the child restraint firmly down into the vehicle seat whilst pulling on the ISOGO straps.

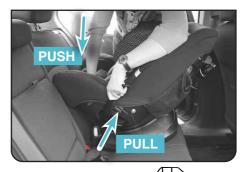

Front of vehicle

Pull loose end of the strap until you get a majority **GREEN** indication.

TIP: Always check for **GREEN** at eye level.

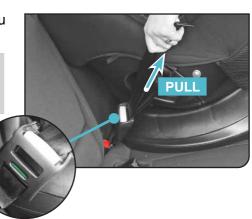

ATTACH TOP TETHER





Front of vehicle

FORWARD-FACING USING ISOGO


TODDLER (12 MONTHS, APPROX) UP TO 4 YEARS









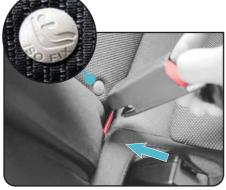



Press the child restraint firmly down into the vehicle seat whilst pulling on the ISOGO straps.





Pull loose end of the strap until you get a majority **GREEN** indication.

TIP: Always check for GREEN at eye level.



ATTACH TOP TETHER



contents

Quick Start Installation	2 - 7
Contents	8
Introduction	9
Warnings	10 - 12
VEHICLE INFORMATION	
Correct Rearward-Facing Vehicle Position	13
Correct Forward-Facing Vehicle Position	14
Location of Top Tether Anchorage Point	15
Correctly Connecting the Top Tether	16
Anchorage Fitting Installation	17 - 20
Seat Angle	21
OPERATION AND ADJUSTMENTS	
Components List	22 - 23
Shoulder Height Markers	24 - 25
Preparing Harness for Child Fitment	26
Headrest and Harness Height Adjustment	27
Fastening the Buckle Assembly	28
To Adjust the Top Tether Strap	29
INSTALLATION	
Rearward-Facing Installation Using Seatbelt	30 - 31
Forward-Facing Installation Using Seatbelt	32 - 33
Rearward-Facing Installation Using ISOGO	34 - 37
Forward-Facing Installation Using ISOGO	38 - 41
CARE AND MAINTENANCE	
Caring for the Buckle	42 -43
Caring for the Seat Fabrics	44 - 47
The Next Seat for your Child	48
Guarantee	49
Notes	50
Registration	51



Before you start:

Thank you for purchasing this child seat. This product is suitable for newborn children to toddlers approximately 4 years old. We welcome you as a valued customer, and trust that your child will enjoy many years of comfort and safety.

No child restraint can guarantee absolute protection from a crash. However proper use of this restraint may reduce the risk of injury or death!

Need assistance?

Call our Customer Service Team: 1300 809 526 Monday to Friday (8:30am - 5:00pm AEST) or send an email: customerservice@dorel.com.au

www.motherschoice.com.au

mother's choice

Read and follow all of the installation instructions for maximum protection. If you have any questions regarding the installation or use of this child restraint in Australia or New Zealand, please contact our customer service numbers provided. An alternative option is to also contact any registered child fitting station authorised by your local transport authority.

- To be used only in a rearward-facing position until the infant's shoulders either reach the lower shoulder height marker (approximately 12 months of age) or reach the middle height marker (approximately 2 to 3 years of age).
 Then to be used in a forward-facing position until the child's shoulders reach the upper shoulder height marker (approximately 4 years of age).
- · Continue to use this child restraint until the child reaches this limit.
- Do not use forward facing until child's shoulders are above the lower shoulder height marker.
- · Infants are at risk of serious injury if they face forward too early.
- Children are at risk of serious injury if they move to booster seats too early.
- Children who have outgrown this restraint are safest in a larger child restraint with an in-built harness or a booster seat until their shoulders reach the upper shoulder height marker of the restraint.

GENERAL

- Use the restraint exactly as shown in the instructions.
- Supervision of children is needed because they may be able to undo the buckles.
- DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.
- Do not alter or modify this restraint.
- · Repairs must only be done by the manufacturers or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible
- · DO NOT USE THIS RESTRAINT WITHOUT THE COVER.
- To ensure infant's back is evenly supported, do not put more than one nappy on the baby and make sure the nappy is not thickly folded at the back.
- DO NOT USE A REAR- FACING CHILD RESTRAINT WHERE AN AIRBAG IS FITTED IN FRONT OF THE SEATING POSITION.

- · Fit the restraint firmly to the car seat.
- · Fit the harness firmly to the child.
- · A loose restraint or harness is dangerous.
- Do not harness an infant wrapped in a blanket or swaddled. Any blanket or wrap must only be placed over the harness and infant.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then advice should be sought from a child restraint fitter and their recommendation be considered before using a seatbelt extender.
- Always secure the loose end of the top tether strap. Do not use the child restraint where this strap may fall into a split in the seat back or off the side of the seat.
- Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.
- ALWAYS ATTACH HOOK AND REMOVE SLACK.
- THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.
- THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR.
- Always check the measurements between the front of the seat back of the rear seat and all front seats in the car in which the child restraint is intended to be used, to ensure that the space is sufficient.
- Care and attention be given to ventilation and shading of the occupant.
- TO BE USED WITH A LAP-SASH/LAP-ONLY SEATBELT OR ISOFIX LOW ANCHORAGES IN THE FRONT/BACK OF MOST CARS WITH FORWARD FACING SEATS.

- The use of child restraints in the front seat may be restricted for children of specific ages by local legislation. Please check with your local legislation regarding any restriction for child restraint. If a car has two or more rows of seats, children under four must not travel in the front seat. If all seats, other than the front seats, are being used by children under seven years, children aged between four and six years (inclusive) may travel in the front seat, provided they use an approved child restraint or booster seat.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by child restraint and may cause injury or death. For approved aftermarket accessories please refer to page 15.
- Please contact Dorel Australia Customer Service with any questions or concerns.


Correct Rearward-Facing Vehicle Position

Some seating positions in your vehicle may **NOT** be safe for this safety seat. Some vehicles do not have any seating positions that can be used safely with the seat.

If you are not sure where to place the infant seat in your vehicle, consult your vehicle's owner's handbook.

Vehicle Seat Location Requirements


Children are safer when properly restrained in rear vehicle seating positions. Whenever possible, secure the infant seat in the centre position of the seat directly behind the front seats.

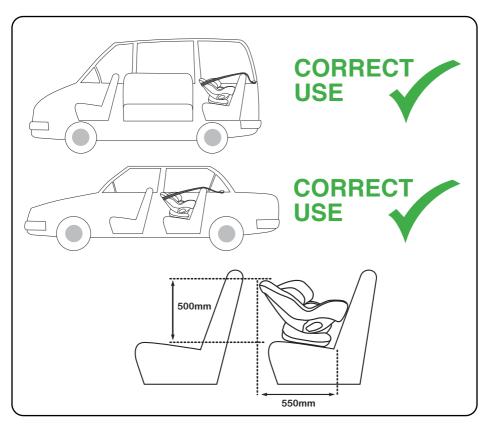


MARNING

IMPROPER PLACEMENT OF THE SAFETY SEAT INCREASES THE RISK OF SERIOUS INJURY OR DEATH.

Correct Forward-Facing Vehicle Position

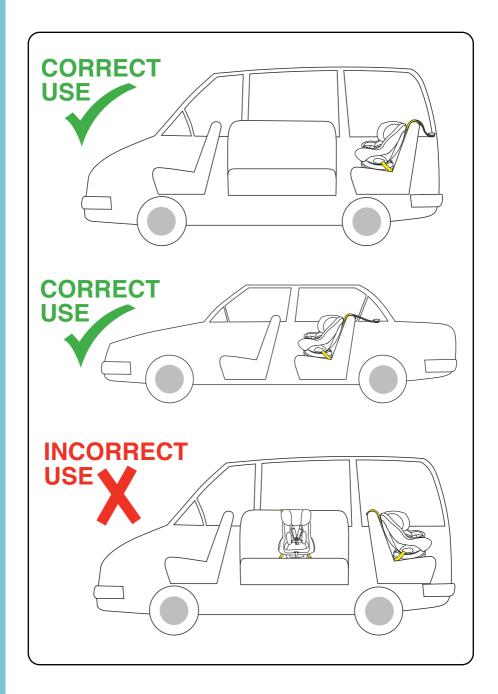

Location of Top Tether Anchorage Point

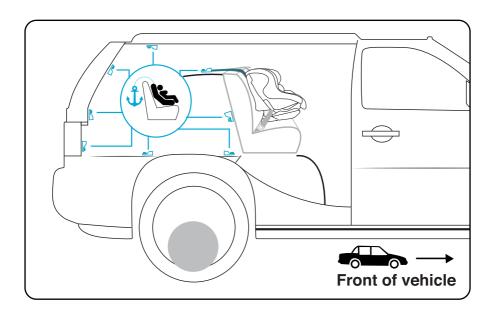

NOTE:

- The anchor point can be found in different locations in different car. The
 illustration above shows possible locations of anchor points. Sometimes
 it is on the parcel shelf in sedans, and on the floor area in station
 wagons, vans and hatchbacks. Make sure that you do not confuse the
 luggage hook in the back of a station wagon with anchor points. Refer to
 your owner's manual.
- An extension strap may be needed for vehicles without a fixed parcel shelf. Extension straps and extra fittings are available from various stores.
- Use of aftermarket accessories not meeting AS/NZS 8005 could cause injury or death.

Extension straps 300mm ref no. 015057	Extension straps 600mm ref no. 015058
Anchor bolt kit ref no. 014400	Locking clip ref no. 014401

Correctly Connecting the Top Tether

Child restraints must be used correctly to provide proper protection for your child. The anchorage system on child restraint must be used in the correct way.

CORRECT

Make sure there is no slack in the top tether strap and the attachment clip is upright in the anchorage fitting.

INCORRECT

The clip must not lie flat on the anchorage fitting.

INSTALLATION	CORRECT Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.	INCORRECT The clip must not lie flat on the anchorage fitting.
FIGURE 1 Anchorages in vertical panel at rear of vehicle	F	X
FIGURE 2 Floor mounted anchorages		X


Anchorage Fitting Installation

FOR CARS FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT

Locate the upper anchorage point behind the rear seating position (consult the car owner's handbook for the location of the upper anchorage point).

Remove the thread plug from the parcel shelf/floor/roof and install the attachment bolt as shown in **Figure 1.**



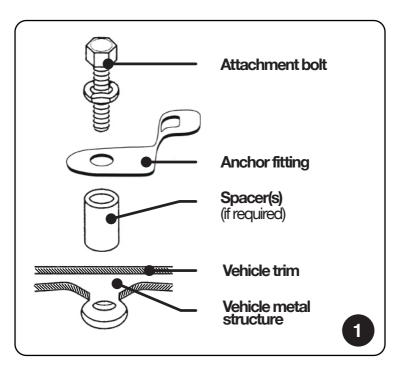


CAUTION:

DO NOT OVERTIGHTEN THE ATTACH-MENT BOLT. OVERTIGHTENING MAY FRACTURE OR BREAK BOLT. MAXIMUM TORQUE IS 20 Nm.


FOR CARS NOT FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT

For sedans only

Drill a 9mm diameter hole in the parcel shelf on the centre-line of the seating position as shown in **Figure 2**.

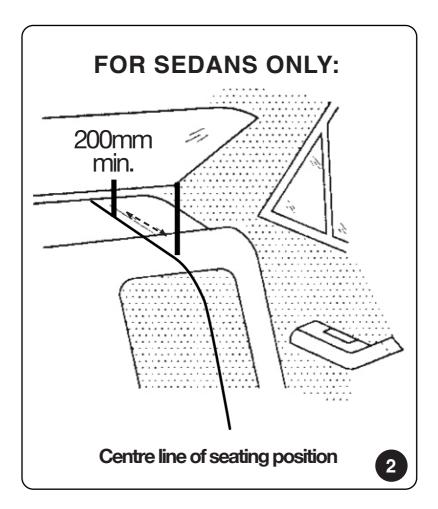

Install the anchor bolt as shown in **Figure 3**. It is recommended that this installation be carried out by a child restraint fitting station or licenced motor mechanic.

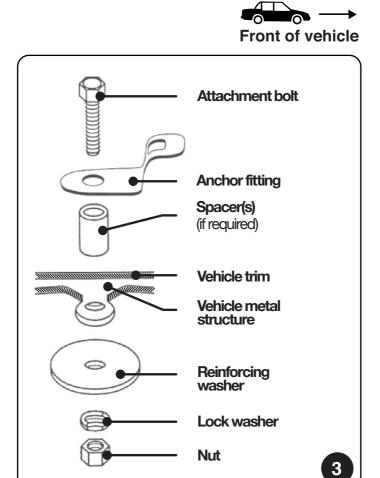

For vehicles other than sedans

In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle.

CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD OR SYNTHETIC STRUCTURES. WHEN DRILLING THE 9mm HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES.

THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.

Seat Angle



Position seat ensuring that the angle is no greater than 53° from horizontal plane.



WARNINGS

- DO NOT install convertible child restraints excessively reclined, ensure the angle is no greater than 53°.
- DO NOT adjust harness or tether strap hardware such that it sits too close to the occupant.
- Ensure that correct seatbelt path is used and that the restraint is installed in the correct direction for rearward facing application (Refer to page 30).
- DO NOT wrap baby in a blanket or swaddled as infant can be ejected and killed in an accident.
- · Ensure the harness fits the baby firmly.
- Ensure that any blanket or other covering may only be placed over the harness after the harness is adjusted firmly.
- The infant's legs are not be bound or wrapped together and the arms are not bound or wrapped together.
- If in rare instances you are unable to meet the installation recommendations as described above, please consult with a professional Child Restraint Installation Specialist.






- 1. Adjustable Headrest
- 2. Air Protect Cell (x2)
- 3. Belt Mates (x2)
- 4. Harness
- 5. Buckle
- 6. Padded Insert
- 7. Belt Path Opening (both sides / under trim)

- 8. Centre Front Adjuster (under cover)
- 9. Seat Base
- 10. Adjuster Strap
- 11. Base Recline Adjuster
- 12. Headrest Adjuster




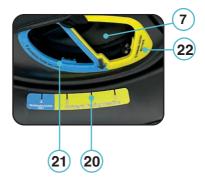

- 21) REARWARD-FACING BELT PATH
- 22 FORWARD-FACING BELT PATH

- 13. Top Tether Strap
- 14. Top Tether Strap Adjuster
- 15. Top Tether / ISOGO storage pocket
- 16. Instruction Manual / ISOGO storage pocket
- 17. Anchor Kit

- **18. ISOGO Lower Connectors** (x2, attached to shell)
- 19. Splitter Plate
- 20. Recline Indicator
- 21. Rearward-Facing Belt Path
- 22. Forward-Facing Belt Path

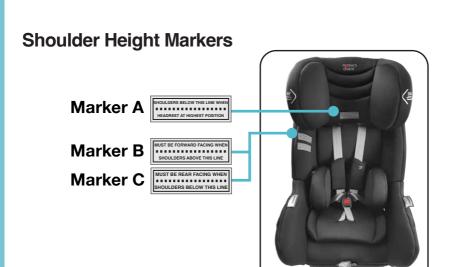

UPPER HEIGHT MARKER



Forward Facing

For toddler use up to approx 4 years old or when the child's shoulders reach the shoulder height marker at which point you must move to the next car seat.

NOTE: You can turn the restraint from rearward-facing to forward-facing anytime once your child's shoulders reach the lower height marker.

MIDDLE HEIGHT MARKER



LOWER HEIGHT MARKER



Rearward Facing

For toddler use up to approx 30 months old or when the child's shoulders reach the shoulder height marker at which point you must turn the seat forward-facing.

Rearward Facing

For newborn use up to approx 12 months old or when the child's shoulders reach the shoulder height marker at which point you can continue to use rearward-facing until the middle height marker, or turn the car seat forward-facing.

- Continue to use this child restraint until the child reaches this limit.
- Do not use forward facing until child's shoulders are above the lower shoulder height marker.
- · Infants are at risk of serious injury if they face forward too early.
- Children are at risk of serious injury if they move to booster seats too early.
- Children who have outgrown this restraint are safest in a larger child restraint with an in-built harness or a booster seat until their shoulders reach the upper shoulder height marker of the restraint.
- The child restraint is unsuitable for the occupant when the shoulders are above the upper marker. The child needs to be moved into the next form of child restraint (booster seat) when they reach the top shoulder height marker.

NOTE:

 If the baby's neck muscles are unable to support their head, then the child should remain rear facing.

Preparing Harness for Child Fitment

You MUST make these adjustments with your child before you install the child restraint in the vehicle. Please adjust harness according to the infant's shoulder height prior to installation.



CONFIGURING THE HARNESS STRAPS FOR CORRECT CHILD FITMENT

- Push the harness release lever at the front of seat.
- 2. Pull the shoulder strap to loosen
- Press red button to release buckle assembly for ease of child fitment. Pull harness straps over sides of infant seat. Place child in seat.
- 4. Fasten buckle assembly. Listen for "click!".
- 5. Pull strap to tighten.

IMPORTANT: ALWAYS ENSURE THAT THE HARNESS ADJUSTER IS FREE FROM ANY OBSTRUCTIONS TO AVOID HARNESS STRAPS LOOSENING.






REARWARD-FACING

(Newborn to approximately 30 months)

The shoulder straps must be in the slots which are nearest to the child's shoulders, but not lower than the child's shoulders.

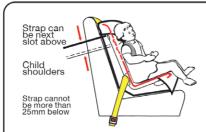



FORWARD-FACING

(12 months to 4 years)

The shoulder straps must be in the slots which are nearest to the child's shoulders, but not more than 25 mm below the child's shoulders.

Headrest and Harness Height Adjustment





ADJUSTING HEADREST AND HARNESS HEIGHT

- Loosen harness straps to allow slack for movement.
- Lift adjuster to release headrest mechanism, pull or push simultaneously, to adjust headrest up or down.
- 3. Release adjuster when desired height is reached, ensuring the headrest is locked in position.

NOTE: Moving the headrest will automatically adjust the harness height.

Recline Adjustment



The seat is fitted with **3** forward-facing recline positions. The **4th** and most reclined position is for rearward-facing use ONLY.

To adjust, place hand under seat and squeeze the **RED** lever to select the desired position.

NOTE: Never use **Position 4** for forward-facing.

MARNINGS

- Always adjust the height of the shoulder straps as the child grows.
- Failure to fasten and tighten the harness system correctly can result in serious injury or death.

Fastening the Buckle Assembly



1. To release press the red button to release the buckle.



2. Insert one buckle tongue as shown in image. You will not hear a click.



3. Insert the second buckle tongue as shown. Now listen for a "click!".




4. Remember to always pull up on the harness straps to make sure buckle is locked tightly.

WARNING


DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

To Adjust the Top Tether Strap

TO LOOSEN

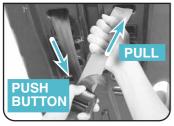

TO TIGHTEN

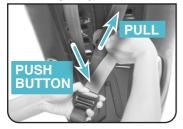



TO LOOSEN:

Press on the adjuster button with thumb and pull strap back through to loosen top tether strap using strap which is attached to the seat.

TO TIGHTEN:

Adjust top tether strap and remove slack. Pull loose end of strap to tighten.

NOTE: Store the excess webbing in the pocket provide on the side of the child restraint.

WARNINGS

CAUTION: CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.

When not in use, fold hanging tether strap and place in storage pocket provided.

Rearward-Facing Installation Using Seatbelt

 Ensure ISOGO latches are secured into stowage bag location.




- 2. Set seat to position **4** (full recline) for rearward-facing.
- 3. Loosen full length of the top tether.



- Place restraint facing rearwards on back seat of vehicle in line with a top tether strap anchorage point.
- 5. Thread the vehicle seat belt through the **BLUE** belt path at the bottom of the restraint and fasten buckle.



6. Press the child restraint firmly down into the vehicle seat and remove belt slack.

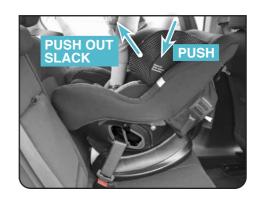

7. Attach the top tether strap to the anchorage point. Adjust until all the slack is removed. Ensure Base of seat is not lifted.



NOTE: There is an option to install seat using seat belt with accessory locking clip. Please see instructions provided with locking clip for installation.

! WARNING

DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

Forward-Facing Installation Using Seatbelt

NOTE: Before you start installation, adjust the shoulder straps to fit your child. *Refer to pages 26-27.*

Ensure ISOGO latches are secured into stowage location



2. Select the desired recline angle (1, 2 or 3).

NOTE: Never use position **4** for foward-facing.



! WARNING

DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

- Place restraint on back seat of vehicle in line with a top tether strap anchorage point.
- Thread the vehicle seat belt through the back of the seat through the YELLOW forwardfacing belt path.
- Place one hand on seat and firmly press the child restraint down into the vehicle seat and pull on seatbelt to remove slack.





 Attach the top tether strap to the anchorage point. Adjust until all the slack is removed. Ensure Base of seat is not lifted.





NOTE: If the car seatbelt is not long enough to secure the child restraint, **DO NOT USE SEAT BELT EXTENDERS.**

NOTE: There is an option to install seat using seat belt with accessory locking clip. Please see instructions provided with locking clip for installation.

Rearward Facing Installation Using ISOGO

NEWBORN UP TO 30 MONTHS, APPROX.

1. Seat seat to position **4** (full recline) for rearward-facing.



Place restraint facing rearwards on back seat of vehicle in line with a top tether strap anchorage point.




Front of vehicle

3. Remove ISOGO latches from stowage bag location.



Locate low anchorage points.
 You can find this by looking for
 the ISOFIX logo located on the
 vehicle seat.

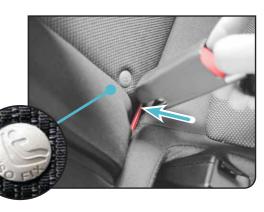

Attach the lower connector on both sides. Listen for a "click!"



TIP: You can move the car seat out of the way to locate and attach the connectors, then place back into position before tightening.




DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

Rearward Facing Installation Using ISOGO

NEWBORN UP TO 30 MONTHS, APPROX.

- Firmly push child restraint down into the vehicle seat whilst pulling on the ISOGO straps.
- Alternate removing the slack from side to side until you get a firm fitment and achieve a majority GREEN indication.

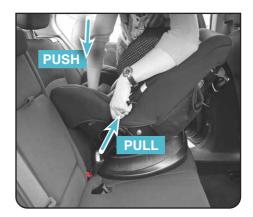




TIP: Always check for GREEN at eye level.



- 7. Attach the top tether strap to the top anchorage point in the vehicle.
- 8. Ensure there are no twists in the belt, and adjust until all slack is removed from top tether.

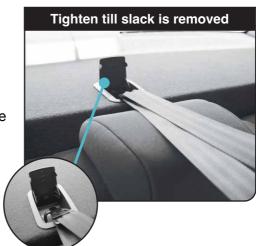

IMPORTANT

Do not attach the lower attachment connectors of two separate child restraints to the same ISOFIX low anchorages in your car. Always attach the top tether strap to the child restraint upper anchorage in your car. Refer to your owner's manual.

Child restraint lower attachment connectors and the ISOFIX low anchorages in your car are designed to withstand only those loads imposed by a correctly fitted child restraint.

Forward Facing Installation Using ISOGO

TODDLER (12 MONTHS, APPROX) UP TO 4 YEARS

1. Select the desired recline angle (1, 2 or 3).

NOTE: Before you start installation, adjust the child. Refer to pages

shoulder straps to fit your 26-27. 2. Place restraint on back seat

of vehicle in line with a top tether strap anchorage point.



SELECT RECLINE 1,2 or 3

Front of vehicle

3. Remove ISOGO latches from stowage bag location.



4. Locate low anchorage points. You can find this by looking for the ISOFIX logo located on the

vehicle seat.



5. Attach the lower connector on both sides. Listen for a "click!"




Tip: You can move the car seat out of the way to locate and attach the connectors, then place back into position before tightening.

Forward Facing Installation Using ISOGO


TODDLER (12 MONTHS, APPROX) UP TO 4 YEARS

- Firmly push child restraint down into the vehicle seat whilst pulling on the ISOGO straps.
- Alternate removing the slack from side to side until you get a firm fitment and achieve a majority GREEN indication.

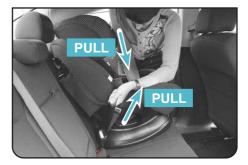



TIP: Always check for GREEN at eye level.

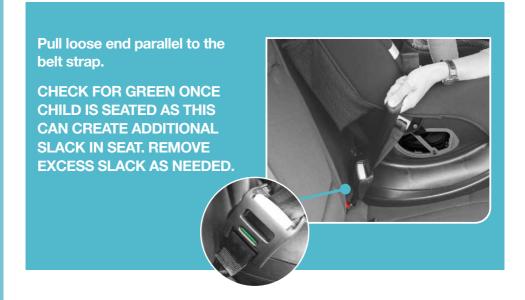

- 7. Attach the top tether strap to the top anchorage point in the vehicle.
- Ensure there are no twists in the belt, and adjust until all slack is removed from top tether.



IMPORTANT

Do not attach the lower attachment connectors of two separate child restraints to the same ISOFIX low anchorages in your car.

Always attach the top tether strap to the child restraint upper anchorage in your car. Refer to your owner's manual.

Child restraint lower attachment connectors and the ISOFIX low anchorages in your car are designed to withstand only those loads imposed by a correctly fitted child restraint.

Caring for the Buckle





When caring for your restraint's buckle, follow the manufacturer's instructions at all times. Before removal, ensure you have carefully noted the way which the various parts are attached to the seat so as to facilitate reassembly.


Your child car seat is equipped with a buckle designed to give your child maximum protection during proper use (**Figure 1**). When working properly, your buckle should always fasten with an audible '**CLICK**'.

If sticky liquids (such as baby food, fruit juice, etc.) get into the buckle it may become sluggish and you will not hear a 'CLICK'.



REMOVING BUCKLE:

- Set seat in position 4 (full recline) (Figure 1a).
- 2. Lay seat on its back to access crotch adjustment (**Figure 1b**).

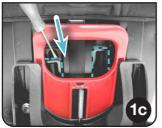

- 1d
- Using a flat object (such as a flat-head screw-driver, not included) gently lift one end of the Metal Plate to loosen (Figure 1c), repeat on the other side.
- Push the metal plates through the top opening to release crotch buckle for cleaning (Figure 1d).





CLEANING BUCKLE:

- Place the buckle unit under running water (40 degrees Celsius), (Figure 2). Let the water flow through the mouth of the buckle for one minute.
- Simultaneously latch and unlatch the tongues into the buckle several times until a strong audible click is heard (Figure 2a).
- If you still cannot hear a strong audible click after latching the buckle several times. Repeat steps above.
 - DO NOT oil any part of the buckle.
- Allow buckle to completely dry.





- Refit crotch buckle ensuring RED button is facing out (Figure 2b).
- Place the two metal plates back through openings.
- Pull up on each side of the crotch straps firmly to snap the metal plates back into place (Figure 2c).



- If the buckle does not return to original working order, contact Dorel Australia Customer Service on **1300 809 526**.
- If you are a New Zealand customer, please contact IGC Dorel New Zealand Customer Service on 0800 628 000.

Caring for the Seat Fabrics

- Seat trim may be removed for cleaning. Don't forget to remove the instruction manual.
- Machine washable on lukewarm setting delicate cycle.
- Tumble dry 10-15 minutes on low heat.
- Do not dry clean.
- All other surfaces should be cleaned with a mild soap and water.
- Never clean with bleach or spirit-type cleaners.
- Do not use the restraint without the cover.
- Check the webbing for fraying.



Located at the back, centre to the seat

TO REMOVE SEAT TRIM:

- 1. Loosen the harness by pressing down on centre front adjuster.
- Turn seat around and undo shoulder straps from the splitter plate (Figure A).
- 3. Pull straps through the cover.
- 4. Undo the buckle and pull harness straps and buckle tongue through trim slots.
- Release all press studs around trim and at the back of the seat as shown in (Figure B).

NOTE: Make sure headrest is in lowest position when removing the body trim, to ensure press stud strap in (Figure C) does not get caught.




TO REPLACE SEAT TRIM:

- 1. Pull the seat trim on the seat.
- 2. Thread the harness through the waist slots.
- Feed the shoulder straps through the harness slots, over the top of the metal bar (Figure C).
- 4. Attach the shoulder straps to the splitter plate.







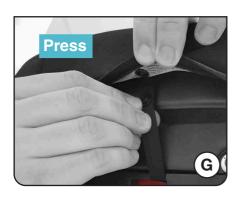

- 5. Peel the headrest trim forward and locate the press stud strap as shown in (**Figure D**).
- 6. Push down the tab behind the head rest adjuster, until it dangles through (**Figure E & F**).
- 7. Connect the press stud strap to the body as shown in (**Figure G**).
- 8. Finish the body fitment by attaching the side press studs.

NOTE: ENSURE HARNESS IS NOT TWISTED

Take extra care to be sure the harness is reinstalled correctly and the shoulder straps are of equal height through both the trim and the harness slots of the seat. NOTE: Never wash air protect cells.

IMPORTANT: IF FITTED, ENSURE AIR PROTECT CELLS (x2) ARE REMOVED FROM HEADREST FABRICS BEFORE WASHING AND ARE REFITTED ONCE DRY.

Air Protect Cells must not be washed and if they have accidentally been damaged, contact our Customer Experience Team on 1300 809 526.



TO REMOVE HEADREST TRIM

- 1. Adjust headrest to the highest position.
- Undo the press studs at the back as shown in (Figures A & B).
- 3. Pull the headrest off the plastic shell.

TO REPLACE HEADREST TRIM

Follow the steps detailed in removing the headrest, in reverse order.







TO REMOVE BELT MATES

To remove the belt mates, simply undo press studs and unwrap from harness straps.

TO REPLACE BELT MATES

Fit belt mates to harness straps by wrapping around straps and closing press studs.



TO REMOVE SEAT INSERT

To remove the seat insert, undo the buckle and pull the insert out.

TO REPLACE SEAT INSERT

 
Feed the buckle through the opening slot in the seat insert and fasten buckle assembly.



VERY IMPORTANT:

Only replace the cover with a manufacturer's supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.

The Next Seat For Your Child



Option 1: HARNESSED FORWARD-FACING CAR SEAT

To be used only in a forward-facing position by a child whose shoulders are above the lower shoulder height marker (approximately 6 months of age) until the child's shoulders reach the upper shoulder height marker (approximately 8 years of age).



Option 2: BOOSTER SEAT

To be used with a lap-sash seatbelt by a child whose shoulders are above the lower shoulder height marker (approximately 4 years of age) until the child's shoulders reach the upper shoulder height marker (approximately 6 to 8 years of age). Can also be used with child harness that is approved for use with this booster seat.



Option 3: LARGER BOOSTER SEAT

To be used with a lap-sash seatbelt by a child whose shoulders are above the lower shoulder height marker (approximately 4 years of age) until the child's shoulders reach the upper shoulder height marker (approximately 8 to 10 years of age). Can also be used with child harness that is approved for use with this booster seat.

For more information, visit motherschoice.com.au



Guarantee

Dorel Australia Pty Ltd warrants your new product to be free from defects in materials and workmanship for 6 years on the seat & 2 years on the trim, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Dorel Australia Pty Ltd will provide you with your choice of a refund, repair, or exchange (where possible) for this product if it becomes defective within the warranty period. Dorel Australia Pty Ltd will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service team on Ph: **1300 809 526** or alternatively, via our website at **www.dorel.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Consumer Service team at **655-685 Somerville Road, Sunshine West, VIC, 3020**. Hours: 8:30 am to 5:00 pm, Monday to Friday.

For New Zealand please contact Customer Service Centre, **14 Sir William Avenue**, **East Tamaki, Auckland, 2013**. Auckland: **(09) 2741040** NZ wide: **0800 628 000** (Toll Free). Hours: 8:00 am - 5:00 pm, Monday to Friday.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

IMPORTANT: KEEP THIS INSTRUCTION MANUAL IN THE POCKET PROVIDED ON THE HEADREST.



Notes		



mother's choice tip...

Visit us online to register your new Mother's Choice product.

www.motherschoice.com.au/product-registration

benefits of registration

- Your safety allows us to contact you with important product notifications.
- Confirmation of ownership provides a record in case of product loss or theft.
- Improved product development helps us continue to design products that meet your needs.

г	-	-	-	-	-	-	_	_	-	_	_	_	_	_	-	_	-	-	- 7
ı																			
ī																			1
ï																			ï
:																			
ı																			-
I																			I
ı																			I
ī						to	nre	NΔ	nt l	000	e 0	r fa	din						ı
_																			
ı					ple	ease	at	tac	ch y	/o u	ır re	ece	ipt	he	re:				ı
L																			- 1
ī																			1
ī																			1
ï																			ï
ı																			
																			- 1
ī																			



DOREL AUSTRALIA PTY LTD

655-685 Somerville Road Sunshine West Victoria 3020 Hours: 8:30 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.com.au

Phone: 1300 809 526

IGC DOREL NEW ZEALAND LTD

14 Sir William Avenue East Tamaki Auckland 2013 Hours: 8:00 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.co.nz **Phone:** 0800 628 000 (toll free)



Specifications are subject to change without notice. Copy or reproduction without permission is prohibited. © 2021 Dorel Australia Pty Ltd. All Rights Reserved.

www.dorel.com.au