

flux
3 wheel stroller

instruction
MANUAL



**IMPORTANT! KEEP FOR
FUTURE REFERENCE**

Illustrations and designs may vary.

contents

<i>assembling the stroller</i>	
Components list	4
Opening stroller	5
Wheel assembly	6
Bumper bar assembly	7
<i>using</i>	
Canopy	8
Swivel wheel	10
Operating brakes	11
Adjusting handle	12
Adjusting backrest	13
Drink bottle storage	14
Folding the stroller	15
Unfolding the stroller	16
Tether strap	17
Securing your child	18
Adjusting harness height	19
<i>care and maintenance</i>	
Care instructions	20
Notes	21
Product registration	23
<i>contacts</i>	
Customer service	24

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



WARNING

TO AVOID INJURY OR DEATH:

- **ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**
- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES AND ENSURE THAT THE SAFETY HARNESS IS ADJUSTED FIRMLY BUT COMFORTABLY TO THE CHILD'S BODY.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**
- **TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN FOLDING AND UNFOLDING THE STROLLER.**
- **ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.**

WARNINGS

- Never leave safety harness connected when not fitted to a child in the stroller, as this may create loops that cause a strangulation hazard.
- Never leave a child in the pram/stroller when ascending or descending stairs or escalators. Use great care when using the stroller on other moving surfaces.
- Use the tether strap to prevent the stroller rolling away.
- Do not allow children to stand on the seat or footrest.
- Do not attempt to lift the stroller by the bumper bar.
- Engage front wheel swivel locks when travelling on rough or uneven surfaces.
- Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.
- Use only those accessories which are supplied by Dorel Australia and approved for use with this stroller.
- To prevent the risk of the stroller catching fire, do not park it near an open fire, heater or barbecue.
- Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

- This stroller has been designed for use on flat or gently slopped surfaces. Using this stroller on uneven or higher sloped surface may cause the stroller to become unstable and tip over.
- Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.
- Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.
- This stroller has been designed for use on flat or gently slopped surfaces. Using this stroller on uneven or higher sloped surface may cause the stroller to become untable and tip over.
- Do not run or jog with this stroller.
- Inflate tyre to 28psi/2.0Bar (195kPa). Over inflation may result in tyre blow-out.
- The weight of the child using this stroller should not be more than **20kg** (approximately 4.5 years of age).
- Shopping basket capacity should not be more than **5kg**.
- Maximum weight for the pocket should not be more than **1kg**.

COMPONENTS



- | | |
|-----------------------------------|-----------------------------|
| 1. Handle | 9. Front wheel assembly |
| 2. Handle adjustment (both sides) | 10. Front wheel swivel lock |
| 3. Folding lock (both sides) | 11. Footrest |
| 4. Tether strap | 12. Safety harness |
| 5. Storage lock | 13. Bumper bar |
| 6. Brake lever | 14. Canopy |
| 7. Basket | 15. Viewing window |
| 8. Rear wheel | |

OPENING STROLLER

1. Release the storage latch (**Figure 1a**).



2. To unfold the stroller, simultaneously lift handle and pull up with a swift motion until and audible 'click' is heard. This will ensure the locking mechanism has engaged.



ASSEMBLING

REAR WHEEL ASSEMBLY

1. Align the round opening on the side of the stroller with the wheel axle.
2. Push down on the metal pin located on the bar of the frame (**figure 2a**). Simultaneously slide the wheel onto the frame until it locks into position.

mother's choice tip..
recommended front wheel
28psi



REMOVE REAR WHEEL ASSEMBLY

1. Push down on the metal pin located on the bar of the frame (**figure 3a**). Simultaneously pull the wheel away from the frame to remove.

mother's choice tip..
recommended front wheel
28psi



ATTACHING BUMPER BAR

1. Align the bumper bar with the frame. Push down onto the bumper bar until an audible 'click' confirms it is secure and in the correct position.



REMOVING BUMPER BAR

1. To remove bumper bar, push in both buttons located on the inner of the bumper bar (figure 4a) and remove from frame.



USING

USING CANOPY

1. Pull the front edge of the canopy to open (figure 5a).

mother's choice tip...

The canopy is permanently attached to the stroller.



USING VIEWING WINDOW

1. To reveal viewing window, ensure canopy is first fully extended.
2. Lift flap from hook and loop tape and fold back to reveal breathable mesh.



CANOPY POSITIONS

6a



6b



6c



6d



USING

OPERATING FRONT SWIVEL WHEEL

TO LOCK:

Push the lever up to lock.

TO UNLOCK:

Push the lever down to engage swivel wheel.



OPERATING BRAKES

1. To apply the brake, press down firmly on the red brake pedal.



ADJUSTING HANDLE

1. There are two buttons either side of the handle bar.
2. Press both adjustment buttons simultaneously and rotate to the desired position.
3. Listen for 'click'.



3 positions



TO ADJUST BACKREST

1. To lower the backrest, squeeze the clasp to release and pull in a downward motion. Release the clasp once desired position has been reached.
2. To raise the backrest, squeeze the clasp and push whilst sliding upwards to desired position.



USING

STORAGE POCKETS

1. Total weight must not exceed 1 kg in both pockets.



FOLDING THE STROLLER

1. Apply rear wheel brakes.
2. Remove all items in the shopping basket.
3. Fold the canopy.
4. Unlock the front swivel wheel.
5. Adjust the backrest to full layback position (see page 15).
6. Pull the folding locks up (figure 7a) and simultaneously push down on the stroller (figure 7b) to fold.
7. Ensure the locking latch is engaged (figure 7c) to ensure the stroller is securely locked.



mother's choice tip...

Lift handle to check that lock has fully engaged.

UNFOLDING THE STROLLER

1. Prior to unfolding, ensure the storage latch is released (**figure 8a**).
2. Simultaneously lift handle up in a short sharp motion until you hear the locking mechanism engage (**figure 8b**).



TETHER STRAP

Whenever a child is in the stroller and brakes are NOT engaged, the large loop should be around your wrist (**figure 9**).



WARNING


Correct use of the tether strap will prevent stroller runaway and possible injury to your child.

SECURING YOUR CHILD

5 points of the harness can be adjusted by moving each straps' slider (figure A1).

To tighten or loosen the waist and/or shoulder straps, hold and lift the plastic adjuster. Adjust straps to desired position. The waist strap needs to fit firmly around the child.


1. Slip one shoulder strap (A) over each shoulder and position crotch strap between legs (figure 10a)

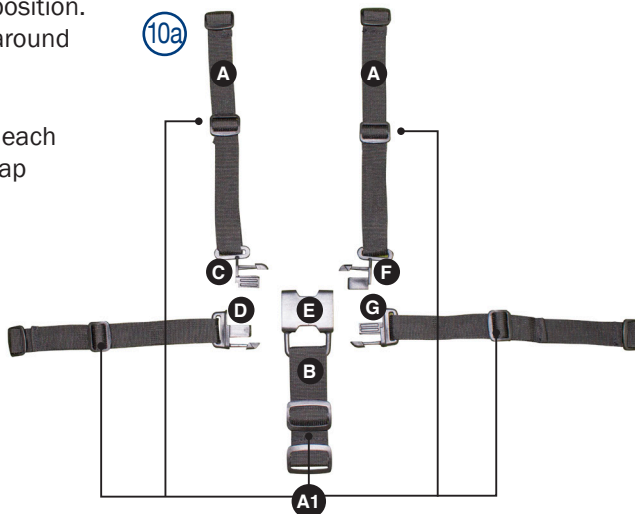


2. Place buckle prong (D) on top of buckle prong (figure 10b)




3. Insert the prongs into the buckle housing (E) until it clicks into position. Repeat the above steps for the opposite side (F and G). Pull straps to ensure they are locked into the buckle assembly.(figure 10c)

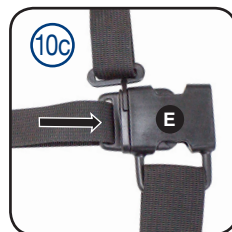

4. The harness should resemble this image. (figure 10d)

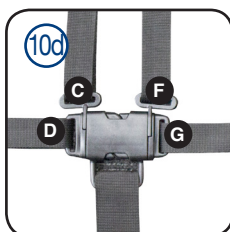

5. The buckle is released by squeezing the top and bottom prongs together until harness disengages. (10e).

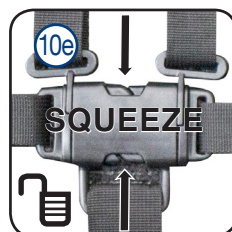

ADJUSTING HARNESS HEIGHT

1. The harness can be set at two heights, as displayed in **figure 11a** and **11b**.



2. To use the lower slot, undo the buckle and feed the shoulder straps in through the loop (**figure 11c**) before securing harness.



3. To use the upper slot, undo the buckle and feed both shoulder straps out through the loop (**figure 11d**).




CARE AND MAINTENANCE

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Occasionally clean and lubricate wheels with a light lubricating oil.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

notes

notes

notes



notes

notes

mother's choice tip...

Visit us online to register your new Mother's Choice product.



follow us on 

motherschoice.com.au

www.motherschoice.com.au/product-registration

benefits of registration

- Your safety - allows us to contact you with important product notifications.
- Confirmation of ownership - provides a record in case of product loss or theft.
- Improved product development - helps us continue to design products that meet your needs.

**to prevent loss or fading,
please attach your receipt here:**



motherschoice.com.au

follow us on 

DOREL AUSTRALIA PTY LTD

655-685 Somerville Road
Sunshine West Victoria 3020
Hours: 8:30 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.com.au
Phone: 1300 809 526

IGC DOREL NEW ZEALAND LTD

14 Sir William Avenue
East Tamaki Auckland 2013
Hours: 8:00 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.co.nz
Phone: 0800 628 000 (toll free)



Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2017 Dorel Australia Pty Ltd. All Rights Reserved.
017501 Flux 3 Wheel Stroller 05/2018
www.dorel.com.au