



INSTRUCTION MANUAL

baby capsule

To be used in rearward facing position
until infant's shoulders reach marker
(approx. 6 months of age)

Illustrations and designs may vary.

IMPORTANT: KEEP THIS BOOKLET IN THE PLACE
PROVIDED ON THE CHILD RESTRAINT.

table of contents

Before you start	3
Product registration	4
Warnings	5
What's in the box	8
Components list	9
Vehicle information	13
Operation and adjustment	21
Shoulder height marker	21
Preparing infant seat to fit your child	22
Adjusting handle	31
Installation	32
Rearward-facing belt path	32
Lap sash and lap base installation	35
Top tether installation	36
Removing seat and detaching top tether strap	38
Storing tether strap	39
Storing instruction manual	40
Covers and accessories	41
Canopy use	42
Care and cleaning	44
The next seat for your child	49
Guarantee	50
Note	51

before you start

Thank you for purchasing this child seat. This product is suitable for children from newborn to approximately 6 months. We welcome you as a valued customer, and trust that your child will enjoy many years of comfort and safety.

No child restraint can guarantee absolute protection from a crash.
However proper use of this restraint may reduce the risk of injury or death!

Need Assistance?

Call our Customer Service Team: **1300 809 526**
Monday to Friday (8:30am - 5:00pm AEST)
or send an email: customerservice@dorel.com.au

www.motherschoice.com.au



mother's choice

product registration

Mother's Choice Tip...

Visit us online to register your new Mother's Choice product.

www.motherschoice.com.au/product-registration

Benefits of Registration

- Your safety - allows us to contact you with important product notifications.
- Confirmation of ownership - provides a record in case of product loss or theft.
- Improved product development - helps us continue to design products that meet your needs.

To prevent loss or fading,
please attach your receipt here:

WARNINGS

Read and follow all of the installation instructions for maximum protection. If you have any questions regarding the installation or use of this restraint, please contact Dorel Australia or agent, or a child restraint fitting station authorised by the relevant transport authority, or in New Zealand, to consult the agent for the vehicle.

GENERAL

- To be used only in a rearward-facing position until the infant's shoulders reach the shoulder height marker (approximately 6 months of age). Continue to use this infant restraint until the child reaches this limit. Infants are at risk of serious injury if they face forward too early.
- Use the restraint exactly as shown in the instructions.
- Supervision of children is needed because they may be able to undo the buckles.
- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturer or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible.
- **DO NOT USE THIS RESTRAINT WITHOUT THE COVER.**
- To ensure infant's back is evenly supported, do not put more than one nappy on the baby and make sure the nappy is not thickly folded at the back.
- **DO NOT USE A REAR-FACING CHILD RESTRAINT WHERE AN AIRBAG IS FITTED IN FRONT OF THE SEATING POSITION.**
- Fit the restraint firmly to the car seat.
- Fit the harness firmly to the child.



WARNINGS

- A loose restraint or harness is dangerous.
- Do not harness an infant wrapped in a blanket or swaddled. Any blanket or wrap must only be placed over the harness and infant.
- Care and attention should always be given to ventilation and shading of the child.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then advice should be sought from a child restraint fitter and their recommendations be considered before using a seatbelt extender.
- Always secure the loose end of the top tether strap. Do not use the child restraint where this strap may fall into a split in the seat back or off the side of the seat.
- **ALWAYS ATTACH HOOK AND REMOVE SLACK.**
- **THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.**
- **THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR.**
- Always check the measurements between the front of the seat back of the rear seat and all front seats in the car in which the child restraint is intended to be used, to ensure that the space is sufficient.
- **TO BE USED WITH A LAP-SASH/LAP-ONLY SEATBELT IN THE FRONT/BACK OF MOST CARS WITH FORWARD FACING SEATS.**

WARNINGS

- The use of child restraints in the front seat may be restricted for children of specific ages by local legislation. Please check with your local legislation regarding any restriction for child restraint. If a car has two or more rows of seats, children under four must not travel in the front seat. If all seats, other than the front seats, are being used by children under seven years, children aged between four and six years (inclusive) may travel in the front seat, provided they use an approved child restraint or booster seat.
- Use of after market accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by the child restraint and may cause injury or death. For approved after market accessories please refer to page 13.
- Please contact Dorel Australia Customer Service with any questions or concerns (see page 3 for contact details).
- This child restraint is not approved for use with any connectors that connect to the car's ISOFIX low anchorages.

what's in the box



What's Included:

- 1 Baby Capsule
- 1 Instruction Manual
- 1 Swing Tag
- 1 Features Card
- 1 Anchor Bolt Kit

components list




- | | |
|--|---|
| 1. Carry handle | 4. Harness tightening strap |
| 2. Canopy | 5. Harness release lever (under upholstery) |
| 3. Instruction manual storage (under the upholstery) | 6. Stroller release buttons (x2) |

components list



- | | |
|---|---|
| 7. Canopy window (if fitted) | 13. Handle adjustment buttons (x2, 3 positions) |
| 8. Storage pocket | 14. Top tether metal connector |
| 9. Seat release lever (behind storage pocket) | 15. Top tether attachment hook (x2) |
| 10. Seat shell | 16. Top tether adjuster |
| 11. Base adjustment handle (2 positions) | 17. Anchor kit |
| 12. Level indicator (x2) | |

components list

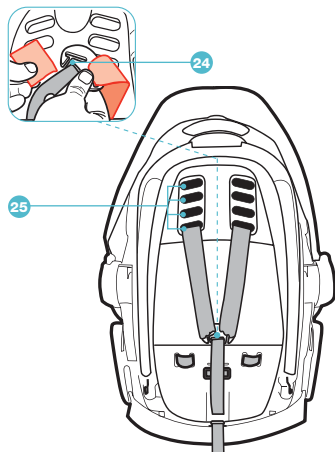

- 18. Infant head insert
- 19. Harness straps (x2)
- 20. Harness covers (x2)
- 21. Buckle

- 22. Buckle cover
- 23. Buckle strap
- 24. Splitter plate
- 25. Harness slots (x8)

components list



26. Stabilising bar

27. Locking bar

28. Base


29. Base belt path opening (x2)

vehicle information

Location of anchor fitting



**Possible
anchor
locations**

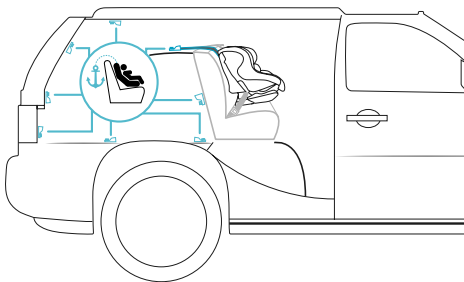

Note:





- The anchor point can be found in different locations in different cars. The illustration above shows possible locations of anchor points. Sometimes it is on the parcel shelf in sedans, and on the floor area in station wagons, vans and hatchbacks. Make sure that you do not confuse the luggage hook in the back of a station wagon with anchor points. Refer to your owner's manual.
- An extension strap may be needed for vehicles without a fixed parcel shelf. Extension straps and extra fittings are available from various stores.

Extension straps 300mm ref no. 015057	Extension straps 600mm ref no. 015058
Anchor bolt kit ref no. 014400	Locking clip ref no. 015059

vehicle information

Anchorage fitment check

Child restraints must be used correctly to provide proper protection for your child. The anchorage system on child restraint must be used in the correct way.

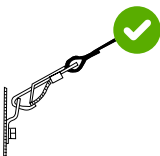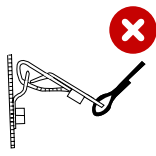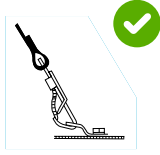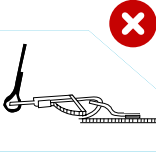INSTALLATION	CORRECT	INCORRECT
	Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.	The clip must not lie flat on the anchorage fitting.
FIGURE 1 Anchorage in vertical panel at rear of vehicle		
FIGURE 2 Floor mounted anchorages		


vehicle information

Upper anchorage installation

For Cars fitted with a Child Restraint Upper Anchorage Point

Locate the upper anchorage point behind the rear seating position (consult the car owner's handbook for the location of the upper anchorage point).

Remove the thread plug from the parcel shelf/floor/roof and install the attachment bolt as shown in **Figure 1**.


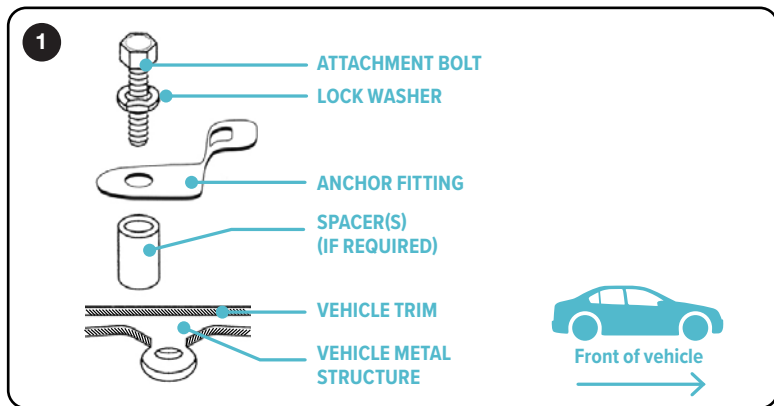


CAUTION: Do not over tighten the attachment bolt. Over tightening may fracture or break bolt. Maximum torque is 20Nm.

vehicle information

Upper anchorage installation for sedans only

FOR SEDANS ONLY:

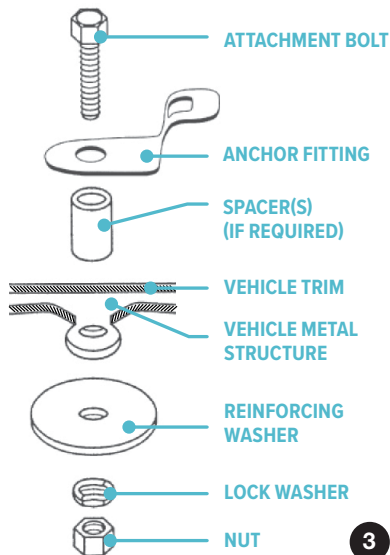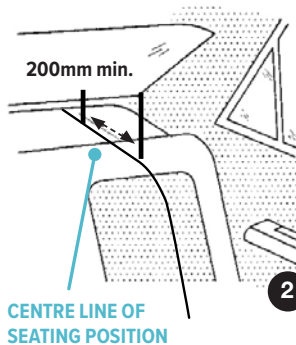

Front of vehicle



vehicle information

Upper anchorage fitting installation

For sedans only

Drill a 9mm diameter hole in the parcel shelf on the centre-line of the seating position as shown in **Figure 2** (as shown on **page 16**). Install the anchor bolt as shown in **Figure 3** (as shown on **page 16**). It is recommended that this installation be carried out by a child restraint fitting station or licensed motor mechanic.

For vehicles other than sedans

In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle.




WARNINGS

CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD, OR SYNTHETIC STRUCTURES. WHEN DRILLING THE 9mm HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES.

THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.

vehicle information

Seat to vehicle positioning

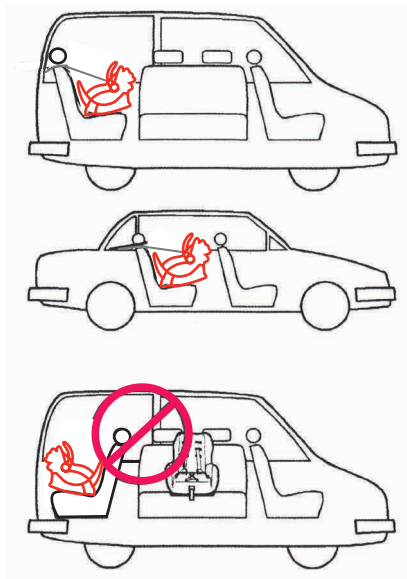

CORRECT USE



CORRECT USE



INCORRECT USE



vehicle information

Vehicle seat location requirements

Some seating positions in your vehicle may **NOT** be safe for this safety seat. Some vehicles do not have any seating positions that can be used safely with the seat. If you are not sure where to place the infant seat in your vehicle, consult your vehicle's owner's handbook.

Vehicle seat location requirements:


Children are safer when properly restrained in rear vehicle seating positions. Whenever possible, secure the infant seat in the centre position of the seat directly behind the front seats.

WARNINGS

IMPROPER PLACEMENT OF THE SAFETY SEAT INCREASES THE RISK OF SERIOUS INJURY OR DEATH.

NOTE:

Check the measurements between the front of the seat back of the rear seat and all front seats in the car in which the child restraint is intended to be used, to ensure that the space is sufficient.

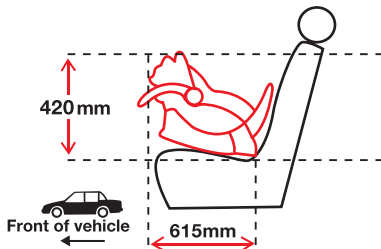

vehicle information

Angle configuration for the seat




- Position seat ensuring that the angle is no greater than 45° from horizontal plane. This position is necessary for the even distribution of forces during possible impact.
- Angular adjustment is achieved by adjusting the base. Make sure the line indicator is level to ground (refer to page 22).

WARNINGS

- DO NOT install child restraints excessively reclined, ensure the angle is no greater than 45°.
- DO NOT adjust harness or tether strap hardware such that it sits too close to the occupant.
- Ensure that correct seatbelt path is used and that the restraint is installed in the correct direction for rearward-facing application. Refer to page 32.
- DO NOT wrap baby in a blanket or swaddled as infant can be ejected and killed in an accident.
- Ensure the harness fits the baby firmly.
- Ensure that any blanket or other covering may only be placed over the harness after the harness is adjusted firmly.
- The infant's legs and arms are not to be bound or wrapped together.
- Always adjust the height of the shoulder straps as the child grows.

operation and adjustment

Shoulder height marker

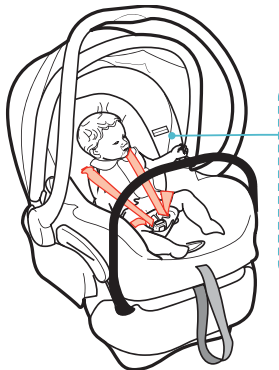

**SHOULDERS MUST BE
■ ■ ■ ■ ■ ■ ■ ■ ■ ■
BELOW THIS LINE**

The child restraint is not suitable for the child when the child's shoulders are above the shoulder height maker.




WARNINGS

- To be used only in a rearward-facing position until the infant's shoulders reach the shoulder height marker (approximately 6 months of age).
- Continue to use this infant restraint until the child reaches this limit. Infants are at risk of serious injury if they face forward too early. For information regarding the next seat for your child, refer to page 49.
- The child restraint is not suitable for the child when the child's shoulders are above the shoulder height marker.

NOTE: If the baby's neck muscles are unable to support their head, then the child should remain rear facing.


operation and adjustment

Preparing infant seat to fit your child

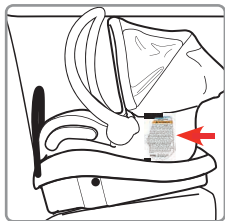


NOTE: You **MUST** make these adjustments before you install the child restraint in the vehicle.

- Place the child restraint in the car and see if seat is level to ground.

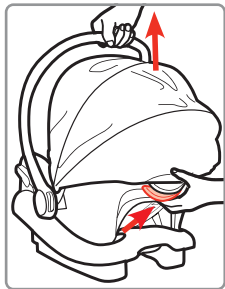


- If the base needs adjusting, remove the seat from the base by squeezing the seat release lever, then lift the seat up and off the base.

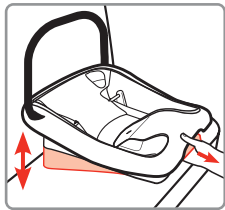

- Squeeze the base adjustment handle and either lift or lower front of base to the desired position.


operation and adjustment

Preparing infant seat to fit your child (cont'd)

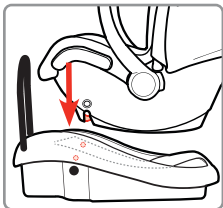


- Align the slots on the side of child restraint with the locking bar in the base.
- Push down firmly on the carrying handle and front of the child restraint will lock to the base.

LISTEN FOR CLICK.

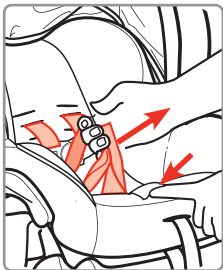



- To loosen harness, push down and hold on the harness release lever (under flap - see **page 9**).
- Pull on one harness strap or both harness straps simultaneously while pressing down on **the harness release lever**.

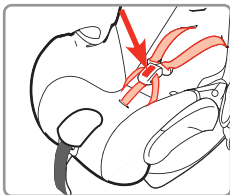


- Press red button to undo buckle.
- Pull buckle tongues out.
- Stretch belt tongues and place the left and right side of the capsule.

operation and adjustment


Preparing infant seat to fit your child (cont'd)

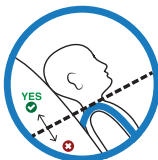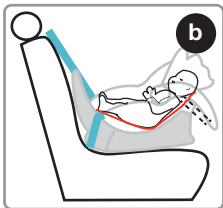

Check harness height. The shoulder straps must be in the slots which are nearest to the child's shoulders, but not lower than the child's shoulders.

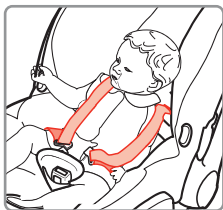


- Child should be in rearward position as shown in **figure b**.
- Place the child's bottom and back flat against the child restraint. This will increase comfort and allow the harness straps to be properly tightened.

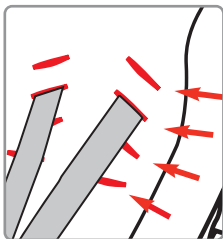


- To change the harness height, determine which set of harness slots works best for your child and adjust if needed.
- Always adjust the height of the shoulder straps as the child grows.

operation and adjustment


Preparing infant seat to fit your child (cont'd)

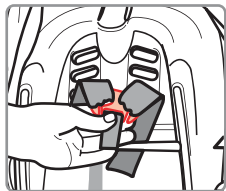

- If harness adjustment is required, locate splitter plate at rear of seat.

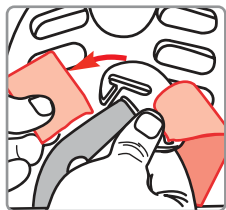

- Remove harness straps from splitter plate at rear of seat.
- Pull harness through the harness slots from the front.

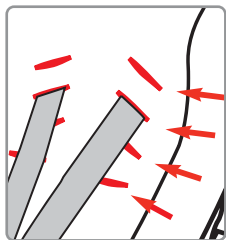


- Re-thread harness into new harness guide locations.

NOTE: Do **NOT** use shoulder straps of unequal heights. Straps must be threaded through the same slot level for the trim and seat.

operation and adjustment


Preparing infant seat to fit your child (cont'd)

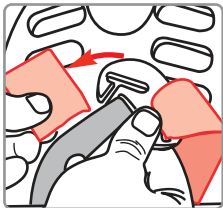

- Refit harness to splitter plate.


NOTE: Make sure harness is securely on and there are no twists.

- Place child in the restraint and position harness straps over the child's shoulders.

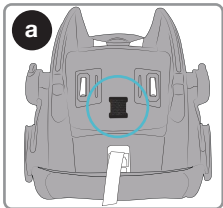


Crotch buckle adjustment

- The carrier is supplied with the buckle length in it's shortened state, which is suitable for smaller children.
- To extend, flip carrier over to expose the underside and subsequent straps. They should appear as shown in figures **a** and **b**.

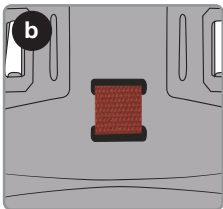


operation and adjustment


Preparing infant seat to fit your child (cont'd)

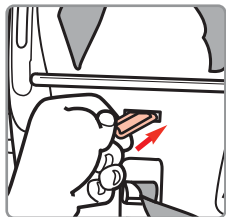

- From under the upholstery, turn and slide buckle's metal retainer back through the shell, extending the buckle's length.

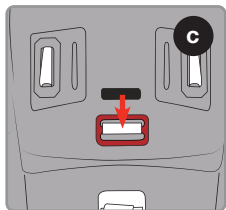


- The metal retainer should now intersect with the under surface of the shell (as show in **figure c**).
- From other side, pull on buckle to check to make sure buckle's metal retainer is correctly inserted through the trim and shell.

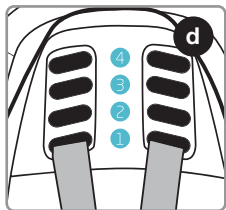

NOTE: It is recommended the buckle be extended when the child's shoulder's reach harness slots, 3 or 4 as show in **figure d**.


operation and adjustment

Preparing infant seat to fit your child (cont'd)

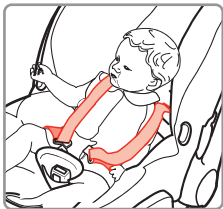

- To tighten the harness, fasten buckle and listen for the click when the second tongue goes in.

NOTE: When using the buckle please note that you will not hear a click when the first tongue goes in, it is only on the second tongue.

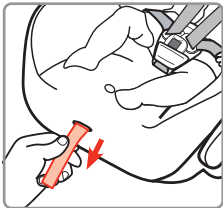


- Pull the adjustment strap at the front of the seat until the harness belt lies firmly against the child.

WARNINGS

- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**
- **THE RESTRAINT SYSTEM SHALL NOT BE USED BY MORE THAN ONE OCCUPANT AT ANY ONE TIME**

operation and adjustment

Preparing infant seat to fit your child (cont'd)

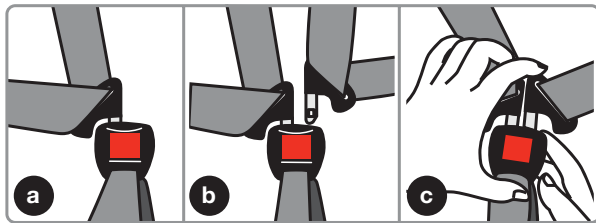


- a** Insert one buckle tongue as shown above.
- b** Insert the second buckle tongue as illustrated above.
- c** Press both tongues simultaneously. Listen for click.

NOTE: Remember to always pull up on the harness straps to make sure buckle is locked. Click will sound when both clips are engaged.


operation and adjustment

Preparing infant seat to fit your child (cont'd)

NOTE: A firm strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

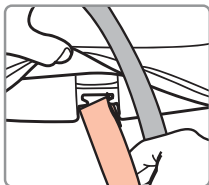

- The end of the harness adjustment strap has a loop. Slide one side of the loop onto one tab and the other end on the other tab.
- Replace the trim cover over the front of the shell.

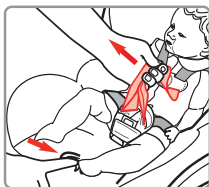


Removing child from child restraint

- To loosen, push down on the harness release lever (under flap on the front of child restraint), while pulling on both harness straps above the buckle.
- To unbuckle, press red button on buckle to release the buckle tongues.
- Stretch belt tongues and place on the left and right side of the capsule.



operation and adjustment

Adjusting handle

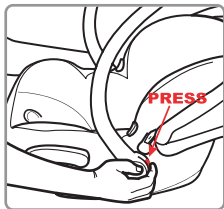


- The carrying handle has 3 positions. To adjust handle, press both adjustment levers on each side of handle. Rotate up or down to desired location.
- Release levers. Listen for click.
- Make sure both sides are locked into place.


**CAR / CARRY
POSITION**



**ROCK
POSITION**

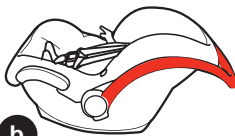

**ANTI-ROCK
POSITION**

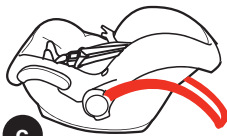

installation

Rearward-facing belt path



OPTION 1 LAP SASH BELT PATH



OPTION 2 LAP BELT PATH

NOTE: There is an option to install seat using a seatbelt with an accessory locking clip. Please see instructions provided with locking clip for installation.



WARNINGS

- Never place a child rear-facing in a seating position with an active frontal airbag. This can result in serious injury or death.
- This child restraint must always face the rear of the vehicle when installed.

installation


Lap sash and lap base installation



PREPARING TO INSTALL BASE WITH VEHICLE BELTS

WARNINGS

- Check the vehicle belt before each use. Use only if the belt is tightened properly and securely.
- Failure to follow these warnings can result in serious injury or death.
- Failure to securely attach child restraint to base can result in serious injury or death.

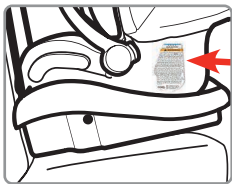


- Using level to ground line as a guide, select the base recline which is best suited for your vehicle. Refer to page **22** for base adjustment.

installation


Lap sash and lap base installation



INSTALLING BASE WITH VEHICLE BELTS

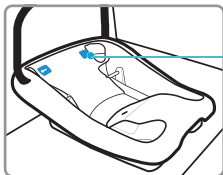

↑
REARWARD
-FACING
BELT PATH

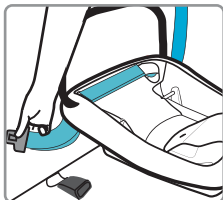

REARWARD - FACING BELT PATH

- Install base facing backwards, with the stabilising bar against the back of the car seat.
- Thread the vehicle lap or lap/shoulder belt combination through belt path as shown.
- Thread the vehicle lap or lap/shoulder belt combination through belt path as shown.
- Buckle vehicle belt. Push down firmly on the base and pull up on the belt to tighten. Pull up on shoulder strap to remove any slack.




installation

Lap sash and lap base installation



- With weakest hand at belt path, tilt and push the base forward and back, and from side to side.
- If the seat belts do not loosen, your child restraint should be secure.


NOTE: Some movement from front to back or from side to side is acceptable.

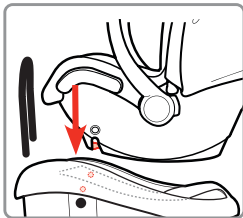

- With child secured in child restraint, attach to base.
- Align the slots on the side of child restraint with the locking bars in the base.
- Push down firmly on the carrying handle and the front of the child restraint to lock child restraint to base. You will hear a **click** when it is locked.
- Pull up on child restraint's front two corners to make sure the front of the child restraint is locked to the base.


Top tether installation

Rearward-facing (Newborn to 6 months)

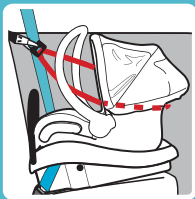


installation

Two-piece top tether strap fitment

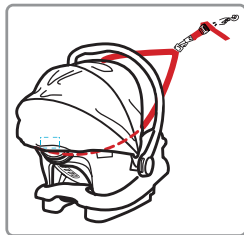

- Attach the hook to anchor in vehicle.
- Adjust tether strap to remove slack in strap (Pull on free end of webbing to tighten).
- Make sure the base is not lifted from the car seat.

NOTE: Do not use canopy extension feature during vehicle operation or when top tether is in use.

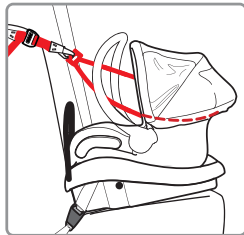


CAUTION: CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

WARNINGS


- Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.
- When not in use, fold hanging tether strap and place in the storage pocket provided.

installation

Removing seat and detaching top tether strap

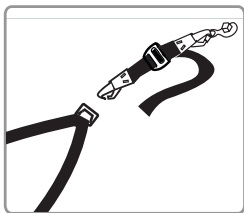

- Loosen the top tether strap using the adjuster and unhook the top tether strap from the loop section.
- Leave the tether attached to the anchor point in car.

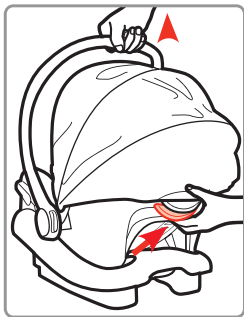


- From the back of the child restraint, slide the base release handle up the back of the child restraint and lift the restraint out of the base.

NOTE: When not in use, fold top tether strap and place in the storage pocket provided.

installation

Storing tether strap

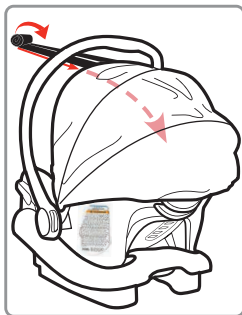



- After detaching the top tether strap, roll the loop tether strap back towards the child restraint, and store it in the storage pocket located at the rear of the shell.



When removing the loop tether strap from the storage pocket, **DO NOT** pull the strap directly across the child restraint. Instead, be sure to evenly spread the loop tether around the side, in line with the shoulder height markers.


installation

Storing instruction manual

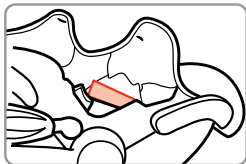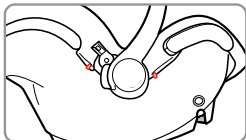



- Unhook the cover from the two pins moulded onto the seat as shown, then repeat for alternative side.
- Unfold the trim from the front of the capsule, folding it towards the back, exposing the buckle strap.
- Place instruction manual in the pocket provided. Then slide both under the trim in front of the buckle.
- Re-attach the trim in reverse order once instruction manual is stored.

covers and accessories

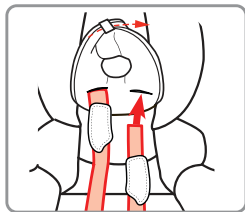

NOTE: Before fitting covers, remove harness from splitter plate see page 25).


- Thread harness straps through the harness pads.
- Place infant head insert over harness slots, aligned with the appropriate slot for your child's shoulder height (see page 25).
- Fit end of infant head insert through band on other side, securing the loop.
- Thread harness straps through slots on infant head insert, and continue through harness slots on capsule.
- Thread harness buckle through buckle cover, ensuring that the largest side is facing the child's crotch.
- Tuck end of buckle cover in through buckle slot, securing the cover in place.

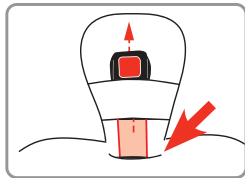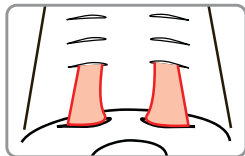



NOTE: Refit splitter plate before continuing (see page 26).

canopy use

Installation and removal of canopy

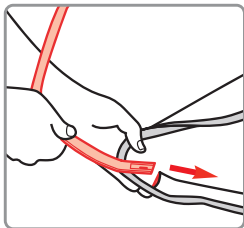


- Slide plastic frame into fabric canopy. Ensure the frame is inserted through elastic loops at ends.
- Slide canopy frame ends into canopy connector on both left and right side of the capsule
- Fit canopy fabric over back of capsule

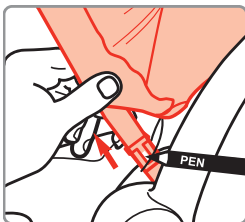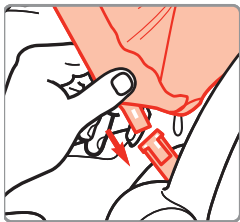


- **To remove canopy:** Use a pen or any pointed object to push the small tab as illustrated and simultaneously pull the plastic strip.

canopy use

Canopy hood extension

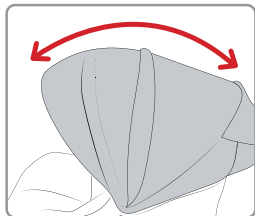


- The canopy can be adjusted to many positions between its retracted and extended positions. To adjust the canopy gently pull or push the visor to the desired position.

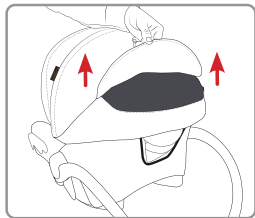


- For increased airflow, raise the canopy window at rear of capsule.

care and cleaning


Remove seat cover for cleaning

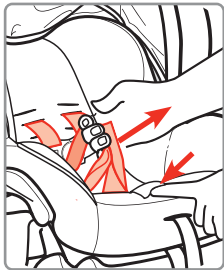

- Push down and hold on the on the harness release lever (under flap - see page 9).
- Pull on one harness strap or both harness straps simultaneously.

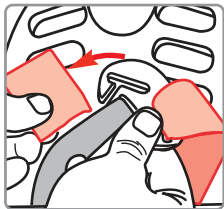



- Remove harness straps from splitter plate at rear of seat.

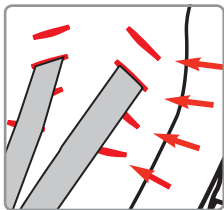

- From the front, pull harness straps out of the shell and trim. Remove the shoulder pads and insert.

care and cleaning

Remove seat cover for cleaning

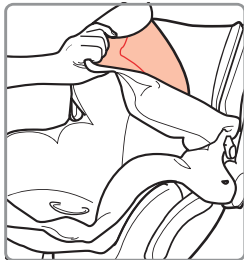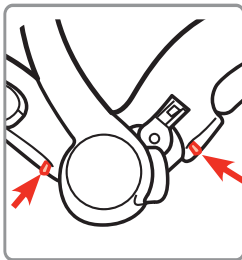


- Unhook the cover from the two pins moulded onto the seat as shown. Repeat for alternative side.
- Unfold the trim from the back of the capsule, folding it towards the front, peeling it away until completely removed.

VERY IMPORTANT:

Only replace the cover with a manufacturer's supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZ 8005.


care and cleaning

Cleaning buckle

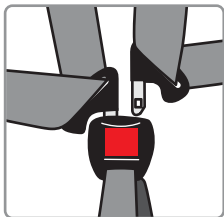


- Push red button to release the buckle.
- From under seat shell, turn and slide buckle's metal retainer up through the shell and trim, removing the buckle.

NOTE: For cleaning instructions, see page 47.

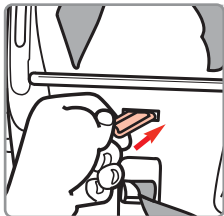

- To assemble, ensure that the red button on the buckle is facing out. Push metal retainer clip through trim and shell.

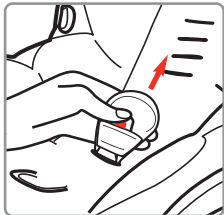

- From other side, pull on buckle to check to make sure buckle's metal retainer is correctly inserted through the trim and shell.

care and cleaning

Cleaning buckle

Follow the manufacturer's instructions at all times. Before removal, ensure you have carefully noted the way which the various parts are attached to the seat so as to facilitate reassembly.

Your child restraint is equipped with a buckle designed to give your child maximum protection during proper use. When working properly, your buckle should always fasten with an audible **click**.

If sticky liquids (such as baby food, fruit juice, etc.) get into the buckle it may become sluggish and you may not hear a **click**.

The buckle should be cleaned by following the steps below.

CLEANING BUCKLES

- Place the buckle unit under running water (40 degrees Celsius). Let the water flow through the mouth of the buckle for one minute.
- Immediately latch and unlatch the tongues into the buckle several times until a strong audible click is heard.
- **Do not** oil any part of the buckle.
- Allow buckle to dry.
- If the buckle does not work, contact Dorel Australia Customer Service on 1300 809 526

care and cleaning

General maintenance

- All other surface should be cleaned with a mild soap and water.
- Never clean with ammonia or bleach based, or spirit-type cleaners.
- Clean the frame with a damp cloth.
- Do not use the restraint without the cover.
- Check the webbing for fraying.
- Ensure there are no cracks in moulding or the plastic moulding.
- Check the Harness Adjuster is operating and is clamping the webbing.
- If any part of the restraint is cracked or broken, seek repair immediately or replace the child restraint.

the next seat for your child

CONVERTIBLE CAR SEAT

To be used only in a rearward-facing position until the infant's shoulders reach the lower shoulder height marker (approximately 12 months of age) or reach the middle height marker (approximately 2-3 years of age).

Then to be used in a forward-facing position until the child's shoulders reach the upper shoulder height marker (approximately 4 years of age).



guarantee

Dorel Australia Pty Ltd warrants your new product to be free from defects in materials and workmanship for 6 years on the seat & 2 years on the trim, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Dorel Australia Pty Ltd will provide you with your choice of a refund, repair, or exchange (where possible) for this product if it becomes defective within the warranty period. Dorel Australia Pty Ltd will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service team on Ph: **1300 809 526** or alternatively, via our website at **www.dorel.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Consumer Service team at **655-685 Somerville Road, Sunshine West, VIC, 3020**. Hours: 8:30 am to 5:00 pm, Monday to Friday.

For New Zealand please contact Customer Service Centre, **14 Sir William Avenue, East Tamaki, Auckland, 2013**. Auckland: **(09) 2741040** NZ wide: **0800 628 000** (Toll Free). Hours: 8:00 am - 5:00 pm, Monday to Friday.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

IMPORTANT: KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT.



**Australian
Standard**

AS/NZS 1754
Lic 40302
SAI Global

notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.



DOREL AUSTRALIA PTY LTD

655-685 Somerville Road
Sunshine West Victoria 3020
Hours: 8:30 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.com.au

Phone: 1300 809 526

Hours: 8:30 am - 5:00 pm Monday to Friday

IGC DOREL NEW ZEALAND LTD

14 Sir William Avenue
East Tamaki Auckland 2013
Hours: 8:00 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.co.nz

Phone: 0800 628 000 (toll free)

Hours: 8:00 am - 5:00 pm Monday to Friday

Suitable for Models:

RMG-A-13-A1



Specifications are subject to change without notice. Copy or reproduction without permission is prohibited. © 2021 Dorel Australia Pty Ltd. All Rights Reserved.

www.dorel.com.au

02/2022